AutoWorld

Radio changing
Nissan NV400 (from 2019), Opel Movano (from 2019), Renault Master (from 2020)








Remove the original pocket.



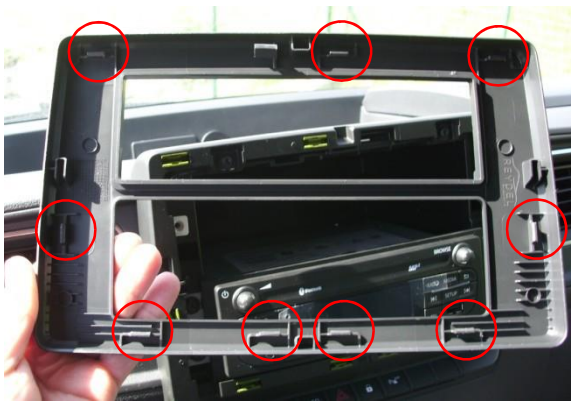

Remove the front panel.



Remove the screws from the factory radio.




Remove the marked screws and bend the frame slightly forward. Now the radio can be removed.



After removing the radio tighten the screws again.



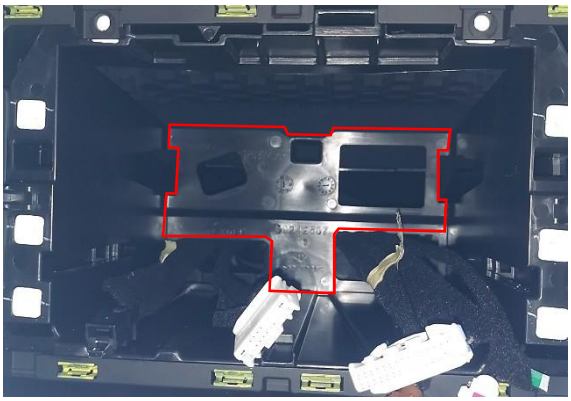

Cutting areas

To arrange a proper installation, it is necessary to cut out a small part of the radio housing / back side (red marked area). The cut-out part can be seen on the right picture.
Take care about the wires.



Fit Fit the metal bracket but do not tighten the screws yet.



Hold the cover plate over the metal frame, but do not press it on and snap it into place. Check if the metal frame is located centrally behind the cover panel, if not, move it in place. Remove the cover plate again and tighten the screws.

1-DIN Radio





Locate the pocket into the cover panel and screw it from behind (see following picture).







If all screws have been tightened again, the cover plate can now be finally fitted. You should hear clearly any click from the noses on the backside. Built in the metal frame from the new radio and install the radio.